


PC-F1A Self Tapping Female

(page 1 of 2)

| | | | | | | | |
|---|---|---|--|--|--|--|--|
|  | USE WITH: | | | INSTALL WITH: | | | |
| | PC-M1B  | PC-VM1  | PC-SM2  | CT-01  | CT-03  | CT-07  | CT-10  |
| | PC-M2H  | PC-VMX  | PC-SM2H  | | | | |

INSTALLATION STEPS FOR UPHOLSTERED PANELS

1 Drill hole through panel and frame

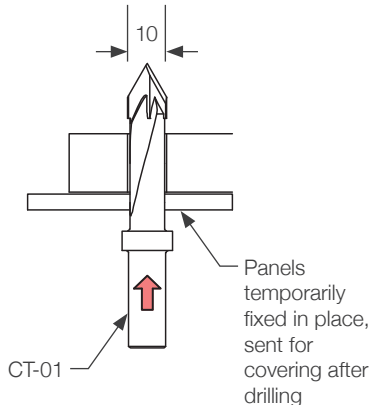


10

CT-01

Panels temporarily fixed in place, sent for covering after drilling


2 Drill out frame hole with CT-07

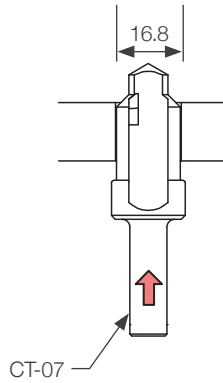

16.8

CT-07

3 Screw fit PC-F1A with CT-03. Use battery drill with clutch set.

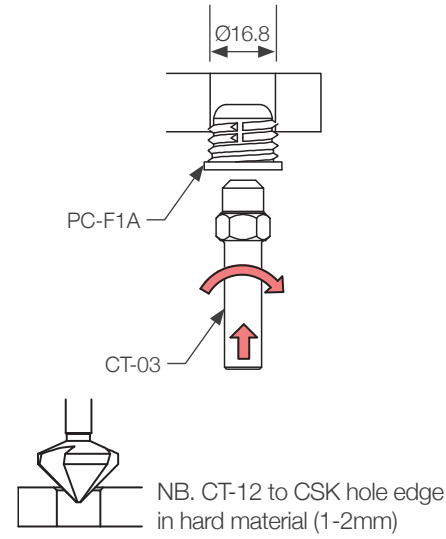

Ø16.8


PC-F1A

CT-03

NB. CT-12 to CSK hole edge in hard material (1-2mm)

4 Screw fit PC-F1A into thin frame

PC-F1A can be used as screw / friction fit into thin frames and seat backs

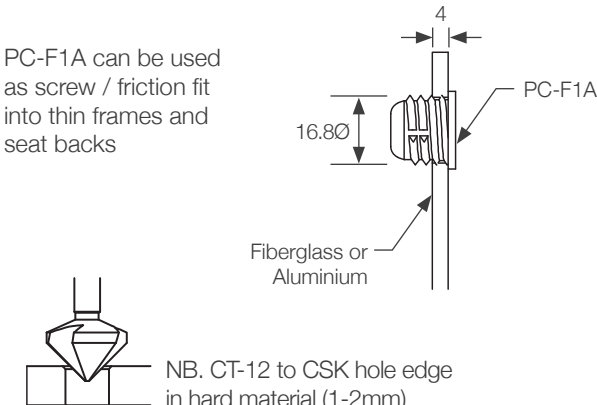

4


16.8Ø

PC-F1A

Fiberglass or Aluminium

NB. CT-12 to CSK hole edge in hard material (1-2mm)

5 Cutaway view showing panel mounting

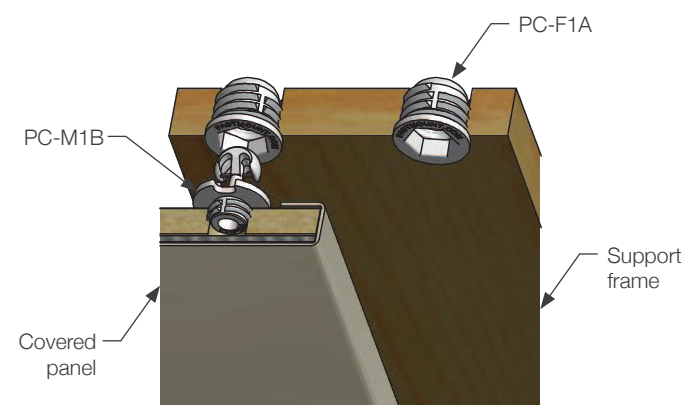

PC-F1A

PC-M1B

Covered panel


Support frame

Male Clips PC-M1B, PC-M2H, PC-VM1, PC-VMX, PC-SM2 and PC-SM2H (page 2 of 2)


| | | | | | | | |
|---|---|---|--|--|--|--|--|
|  | USE WITH: | | | INSTALL WITH: | | | |
| | PC-M1B  | PC-VM1  | PC-SM2  | CP-01ST  | CT-07  | CT-09  | CT-10  |
| | PC-M2H  | PC-VMX  | PC-SM2H  | | | | |

INSTALLATION STEPS FOR PAINTED OR PRE-FINISHED PANELS (First complete steps 1 to 3, page 1)

1 Fit CP-01ST into PC-F1A then push panel to mark center

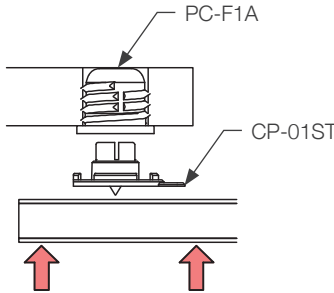


2 Drill panel on center mark with CT-09 6mm deep for PC-M1B, 8mm deep for PC-VM1, PC-VMX, PC-M2H

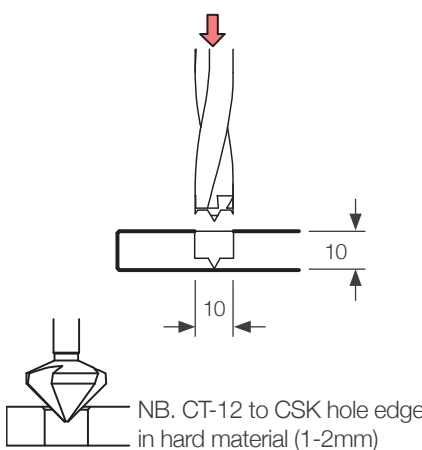


NB. CT-12 to CSK hole edge in hard material (1-2mm)

3 Screw fit male clip with CT-10. Use battery drill with clutch set.

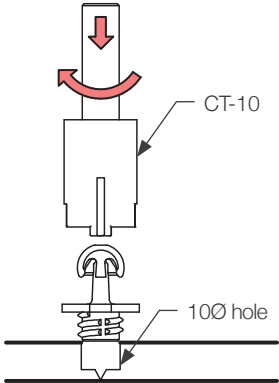


INSTALLING ADHESIVE FIT MALE CLIPS (FIRST COMPLETE STEPS 1 TO 3, PAGE 1)

4 Clip PC-SM2 into PC-F1A

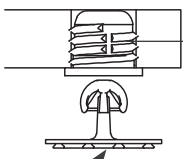


PC-SM2 or PC-SM2H

5 Apply adhesive to PC-SM2

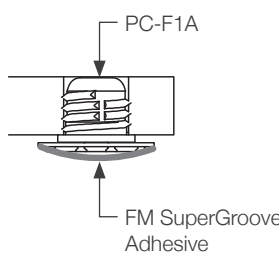

PC-F1A
FM SuperGroove Adhesive

5 Place panel and support while adhesive dries

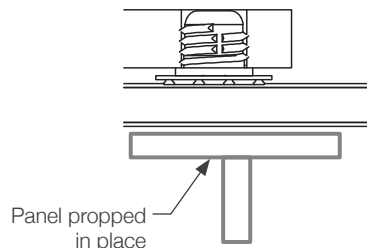

Panel propped in place